Please Note: only 1 Magic remote can be registered to the TV at one time. Please read **"C." if you have 2 Magic remotes.

**You must use brand new alkaline batteries only. Do not mix new batteries with old batteries.

** Failure to match the correct polarities of the battery may cause the battery to leak.

A. Registering the Magic Remote Control

To use the Magic Remote, first pair it with your TV.

1) Put batteries into the Magic Remote and turn the TV on by pressing the remote's power button.

2) Point the Magic Remote at your TV and press the Wheel (**OK**) on the remote control. Then follow the prompts to complete the process.

**If your Magic remote won't register to your TV, you might need to restart the process. Please follow the steps below on how to Deregister the remote from your TV so that you can Re-register it again.

B. How to Deregister/Re-register the Magic Remote Control

Deregister

Press the () and () buttons at the same time for five seconds, to unpair the Magic Remote from your TV.

Re-register again

Press and hold the (Magic Remote. Your remote should now be paired.

**If not, point the Magic Remote at your TV and press the Wheel (OK) on the remote control. The remote should now be registered to the TV. Please try these steps several more times if it does not register.

C. If the TV Continues to fail Registering the Magic Remote Control

Please Note: only 1 Magic remote can be registered to the TV. If you still have your old remote, you need to un-pair it. Press the (Back) and (Home) buttons at the same time for five seconds to unpair. Then, remove the batteries in the unwanted remote; unplug the TV for 60 seconds. Plug the TV back into the wall. Get your new remote, and start the registering process again. **Start at step A.1 above.

Important- If you cannot get the remote to work, please email us your full TV model number before returning. We can usually help! Thank you.